



JACKSON GREEK WEATHERLEDGE

Where quality

Craftsmanship

is a way of life...





TABLE ONTENTS

4 RESIDENTIAL AND COMMERCIAL APPLICATIONS

14 LEDGESTONE


18 PRO STACK

22 QUARRY CUT

28 WEATHERLEDGE

32 LIMESTONE

34 NATIVESTONE

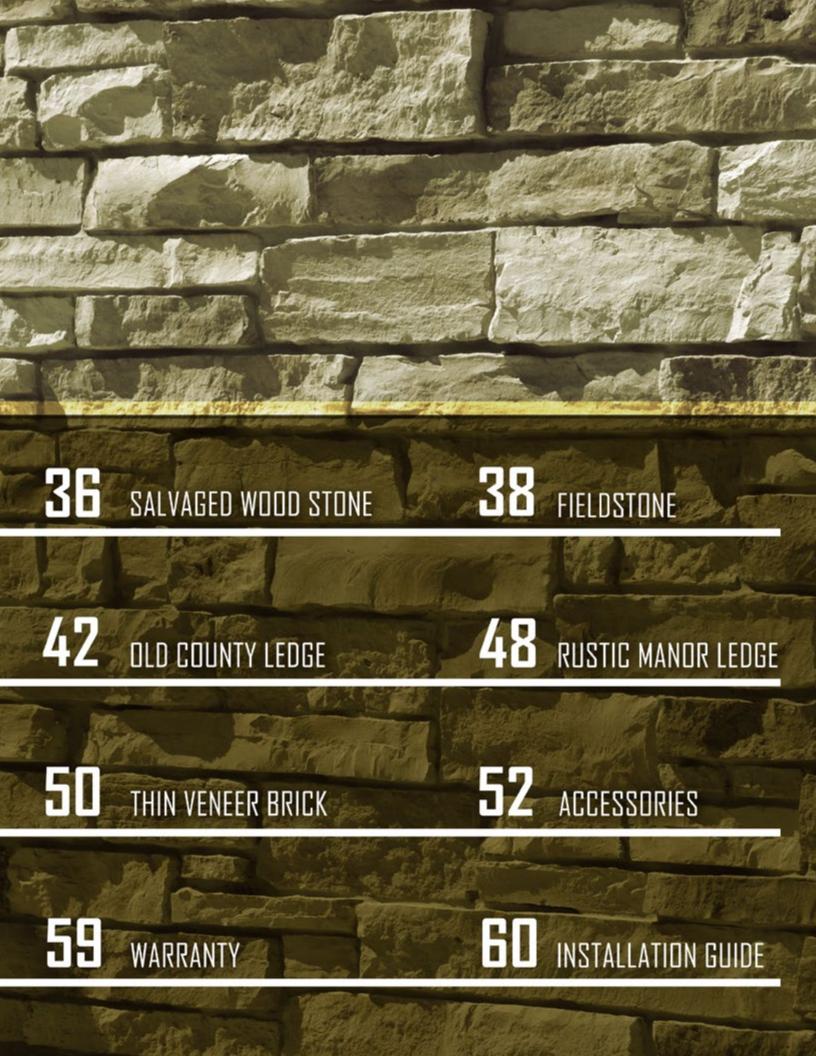

RESIDENTIAL APPLICATIONS





RESIDENTIAL APPLICATIONS





RESIDENTIAL APPLICATIONS





COMMERCIAL APPLICATIONS

Why pick manufactured stone veneer instead of natural quarried stone veneer?

- Not weight bearing, no need for a footer or additional reinforcement and expansion joints
- COMPETITIVELY PRICED TO BE WELL WITHIN BUDGET CONSTRAINTS.
- MUCH LARGER VARIETY OF COLORS AND SHAPES







COMMERCIAL APPLICATIONS















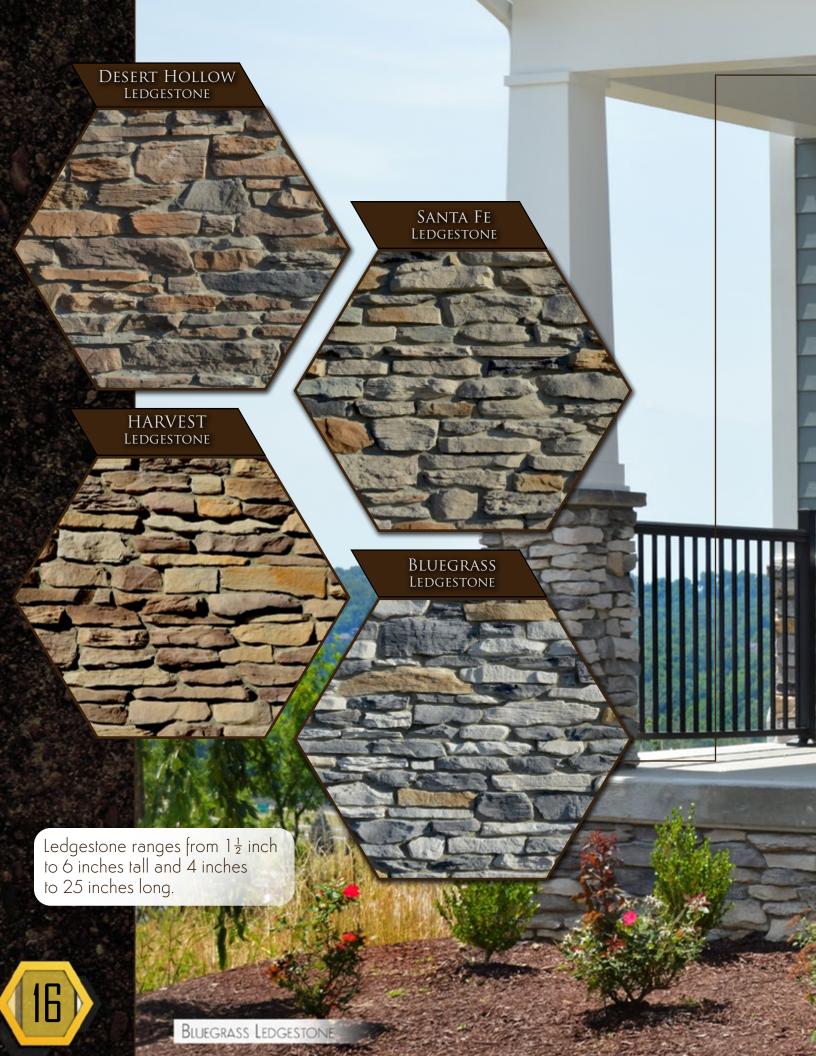



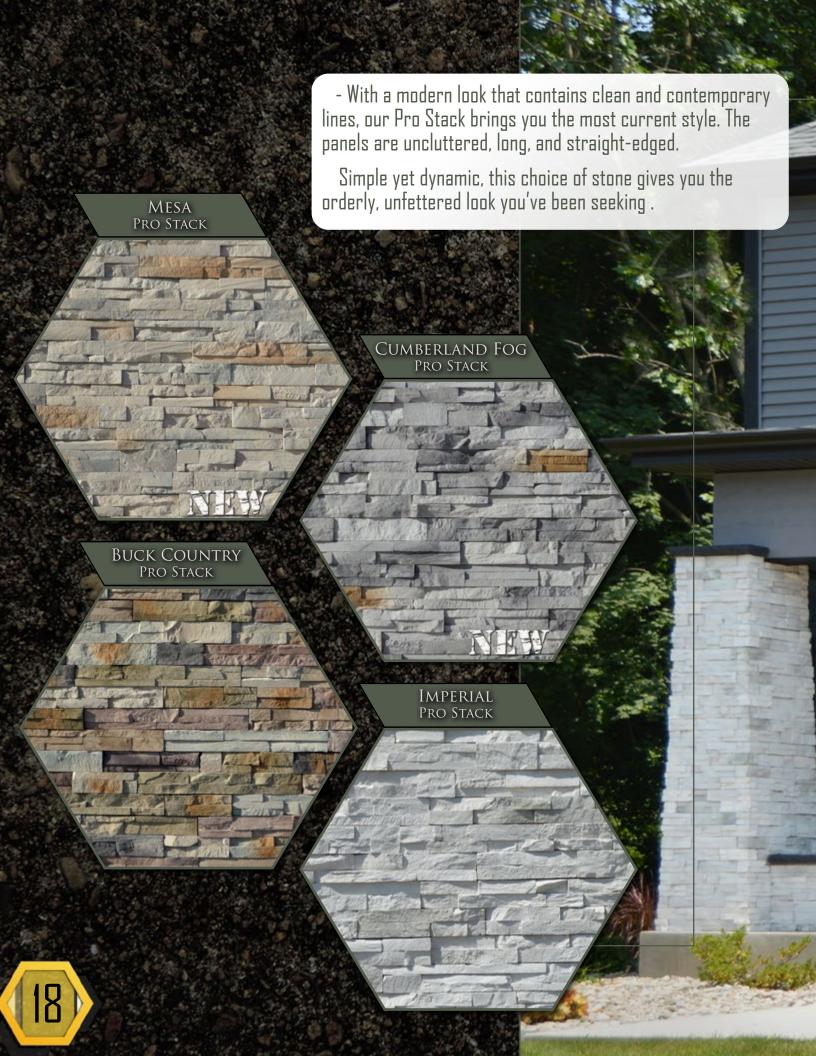

























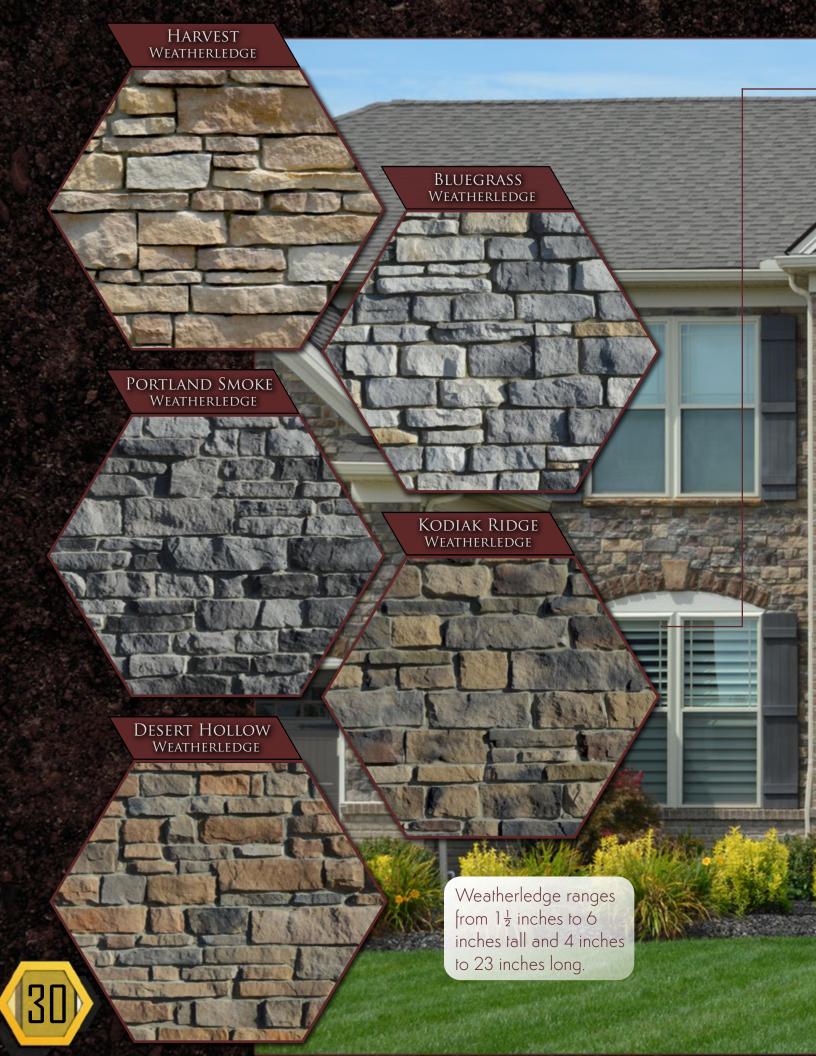





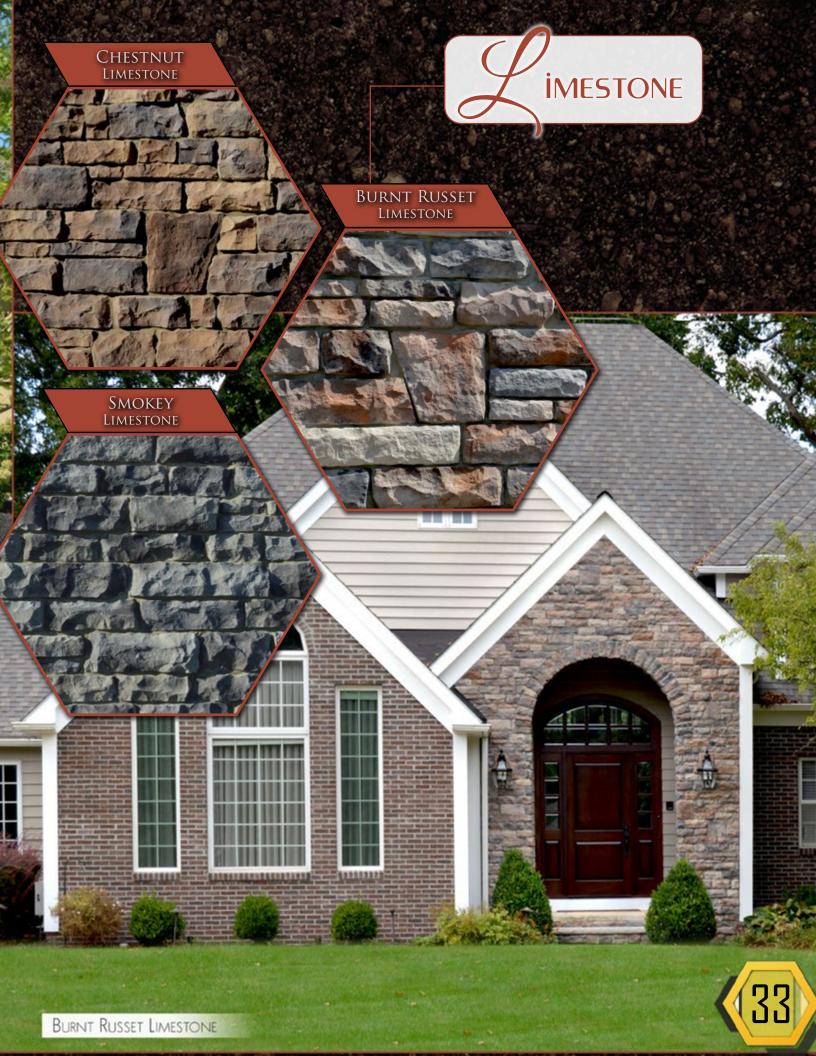





-Our Nativestone features the natural look of authentic native Ohio limestone.

They are found in the Lake Erie region of Ohio.

Portland Smoke Nativestone

PORTLAND SMOKE NATIVESTONE

































REDWOOD Thin veneer brick



FARMHOUSE Thin veneer brick




Thin Veneer Brick is $2\frac{1}{2}$ inches wide by 8 inches long by 1 inch deep.

MAHOGANY THIN VENEER BRICK

MAHOGANY Thin veneer brick



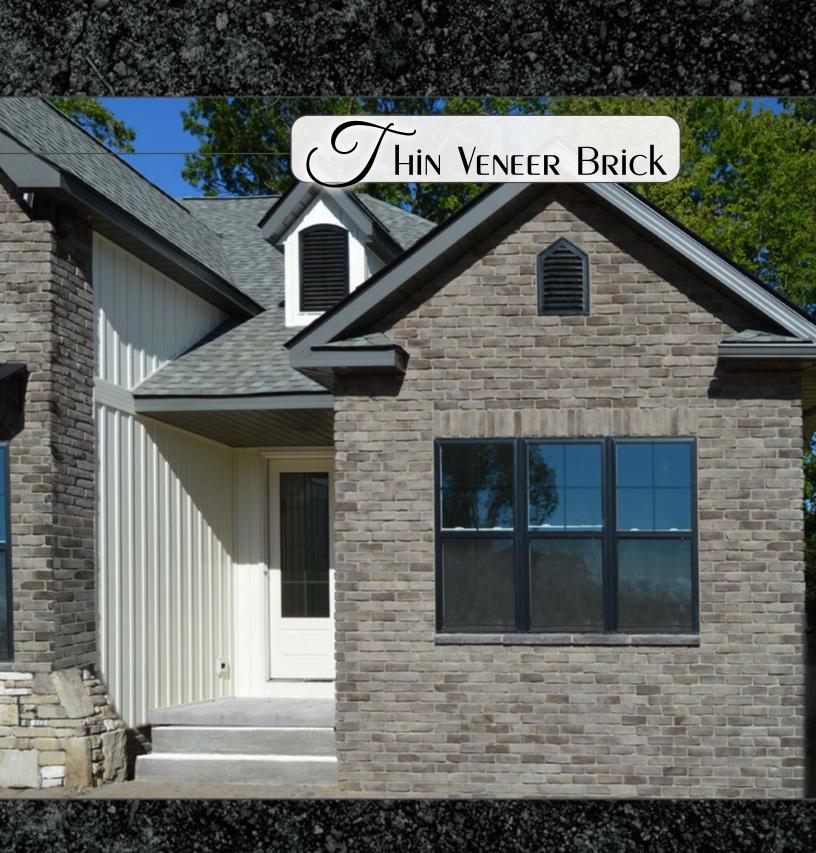

Accessory Golor Reference Guide

Color	WEATHERLEDGE	LEDGESTONE	OLD COUNTY LEDGE	Pro Stack
Charcoal				
Kodiak Ridge				
Buck Country				
Portland Smoke				
Bluegrass				
Portland Mist				
Harvest				



FIELDSTONE	Nativestone	QUARRY CUT	RUSTIC MANOR LEDGE	Suggested Colors
				Brown Gray
				Brown Gray
				Brown Tan
Sept.				PORTLAND GRAY
				PORTLAND GRAY
				Tan Portand
				Brown Tan

ACCESSORY GOLOR REFERENCE GUIDE

Color	WEATHERLEDGE	LEDGESTONE	OLD COUNTY LEDGE	Suggested Colors	
Bordeaux Creek				BROWN TAN	
Desert Hollow				Brown Tan	
Monterey				BROWN GRAY	
Santa Fe				Brown Tan	
Portland Dusk				PORTIAND GRAY	
Color	WEATHERLEDGE	FIELDSTONE	Nativestone		
Jackson Creek				BROWN GRAY	
TAN				Brown Tan	



Color	Weatherledge			Suggested Colors
Sequoia				Brown
	Pro Stack	OLD COUNTY LEDGE	QUARRY CUT	
Moonlit Forest				Brown Gray
Mesa				BROWN TAN
Cumberland Fog				PORTLAND GRAY
I MPERIAL				WHITE

ALL COLORS LISTED HERE ARE FOR SUGGESTION ONLY AND ARE SOLELY AT THE DISCRETION OF THE USER. FOR COLOR, PLEASE REFERENCE STONE SAMPLES OR CURRENT INSTALLATIONS FOR COLOR REPRESENTATION.

ACCESSORY GOLOR REFERENCE GUIDE

Color	Limestone	Color	Limestone	SUGGESTED COLORS
Grandview		Ohio White Vein		TAN
Burnt Russet		Chestnut		Gray
Smokey				GRAY
French Country				TAN

ALL COLORS LISTED HERE ARE FOR SUGGESTION ONLY AND ARE SOLELY AT THE DISCRETION OF THE USER. FOR COLOR, PLEASE REFERENCE STONE SAMPLES OR CURRENT INSTALLATIONS FOR COLOR REPRESENTATION.


ACCESSORY SIZING GUIDE






WATERTABLE SILL




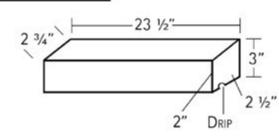


LIGHT BLOCK

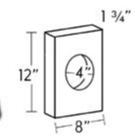

HYDRANT BLOCK

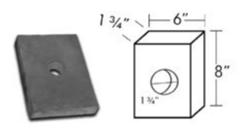


Rowlock

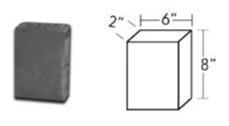


WALL CAP



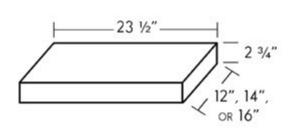


WINDOW TRIM

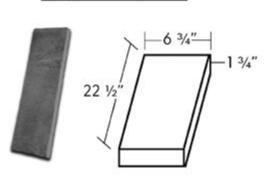


ROCKFACE KEYSTONE



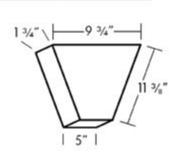

PIER CAP

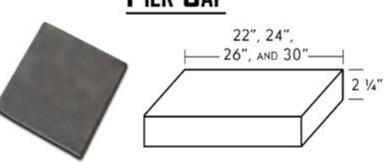


ACCESSORY SIZING GUIDE





HEARTHSTONE



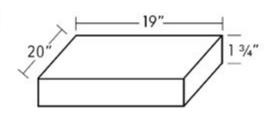

RECEPTACLE BLOCK

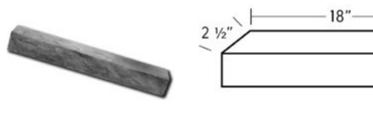

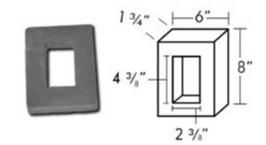


AVAILABLE Colors



FIREPLACE MANTLE


2 1/2"

DRIP

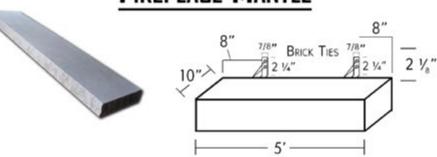

FIREPLACE BRACKET



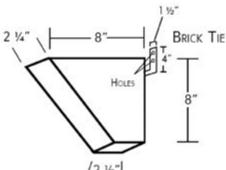


WARRANTY INFORMATION

50 year limited warranty from the date of purchase, when installed to manufacturers instructions, and installed according to local building codes. Warranty does not cover damaged product resulting from building settlement, wall movement, improper installation, or discoloration due to airborne contaminants.


Warranty is subject to all other terms of the written warranty, a copy of which can be obtained from your dealer or by visiting www.prestigestoneproducts.com.

The Contractor and Architect are responsible for proper installation. Prestige Stone Products, Ilc is not responsible for the structural wall surface it is applied to. Make sure to follow all of your local building codes. Building codes will vary from state to state, county to county.

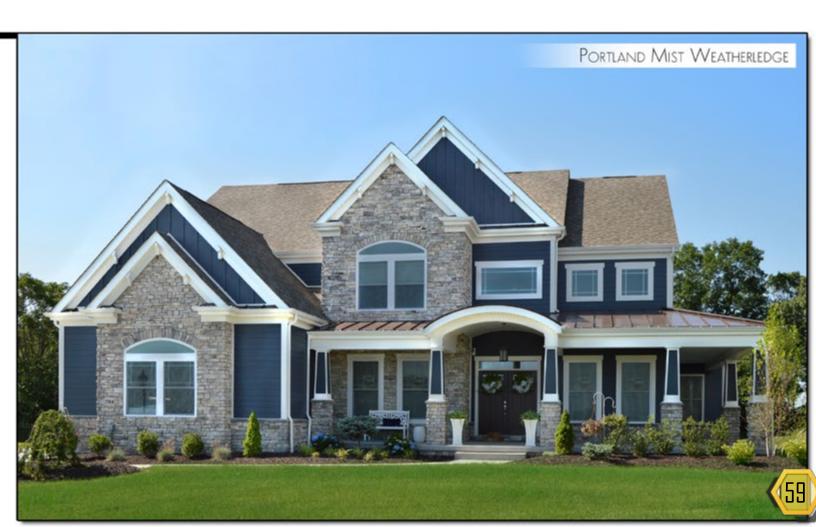

NSTALLATION INSTRUCTIONS

1. Installation Over Wood Framing

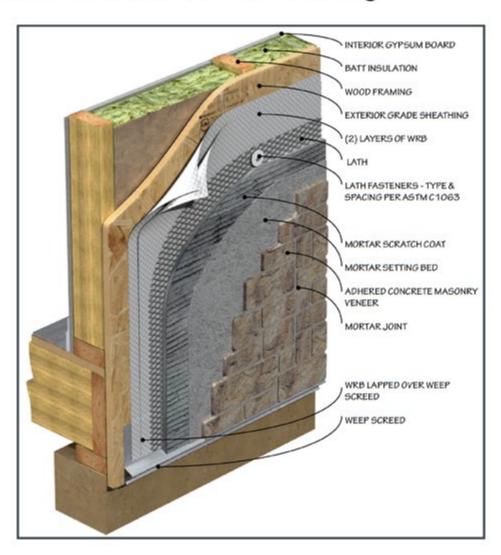

Applying the Metal Lath

Apply a moisture barrier of housewrap and 30 pound felt. Overlap horizontal joints 5 inches and vertical joints 8 inches. All corners must be wrapped a minimum of 16 inches. Then apply 2.5 pound metal lath or equivalent. Metal lath must be overlapped in the same manner as the felt. Fasten with wide crown staples at least 1 inch in length. Make sure all chimneys and windows are properly flashed.

Applying the Scratch Coat

Apply a scratch coat using Type M or Type N mortar, approximately $\frac{1}{4}$ inch to $\frac{1}{2}$ inch thick. Make sure the mortar is not too wet or too dry.


Applying the Stone

Install corners first. Spread mortar evenly on the back of the stone, approximately $\frac{1}{2}$ inch thick. When applying the stone to the wall, move the stone back and forth a little bit in a circular motion. Make sure your mortar is not too dry or too wet for proper bonding. In hot weather you may need to wet down the back of the stone or the scratch coat.





2. Installation Over Concrete Masonry Units

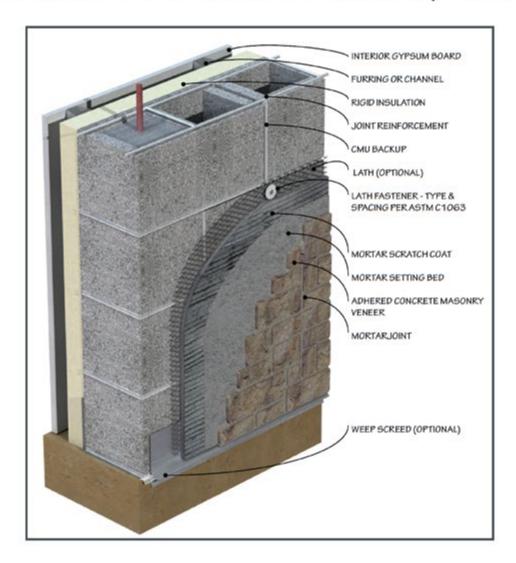

Grouting Instructions

Use a grout bag to grout the joints, making sure you do not get cement on the face of the stone. Let the grout joint set up until it is slightly dry, then strike the joint with a jointer or other similar implement. Make sure it isn't too wet or too dry. If the mortar wets or stains a brush it is too wet. Brush out the joints with a soft brush.









